

Betriebsanleitung  
 Operating Instructions  
 Instructions de service  
 Istruzioni d'uso  
 Handleiding  
 Instrucciones para el manejo  
 Manual de instruções  
 Naudojimosi instrukcija  
 Kasutusjuhend  
 Lietošanas instrukcija  
 Driftsinstruks  
 Driftsinstruktioner  
 Käyttöohje  
 Driftsvejledning  
 Instrukcja obsługi







Kezelési útmutató  
 Návod k obsluze  
 Navodilo za uporabo  
 Návod na obsluhu  
 Upute za rad  
 Manual de operatii  
 Treoracha Oibriúcháin  
 Οδηγίες χρήσης  
 El Kitabi  
 Инструкции за експлоатация  
 Инструкция по эксплуатации  
 取扱説明書  
 사용설명서  
 使用说明书







2006/42/EG



DIN EN ISO 9001  
 001929 QM  
 DIN EN ISO 14001:2015


<b>1</b> 16 kg 35 lbs	<b>2</b>	

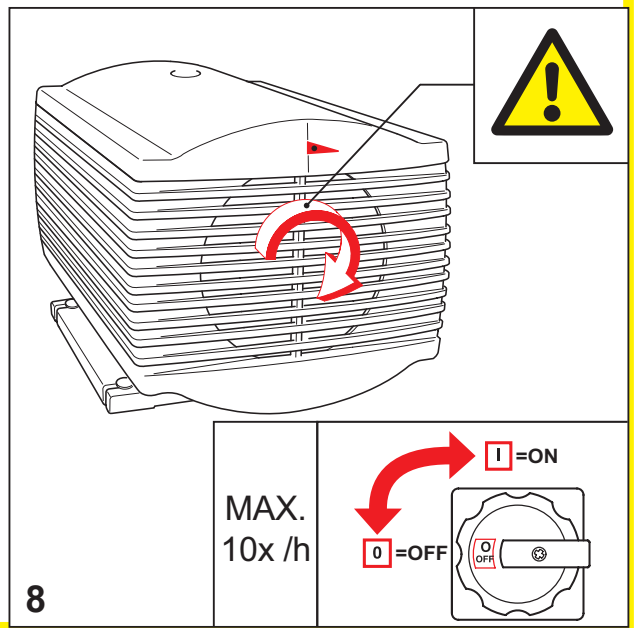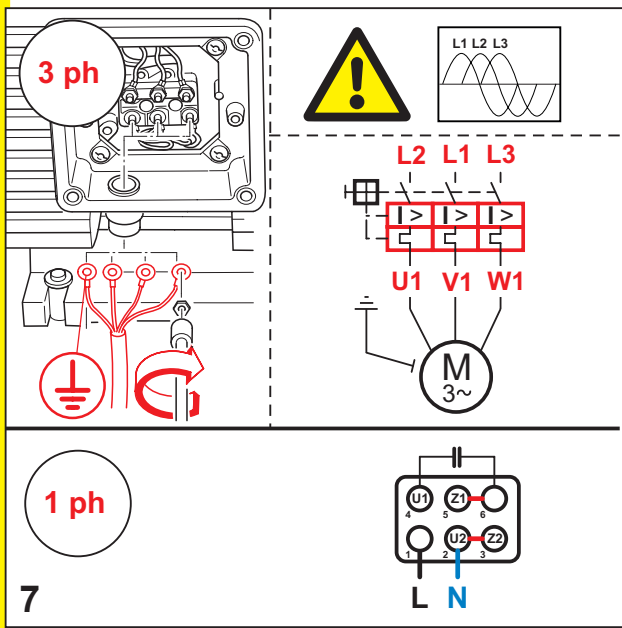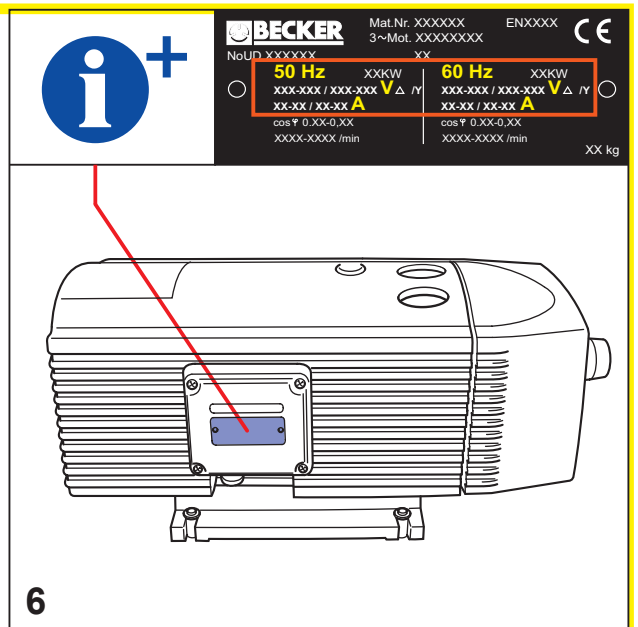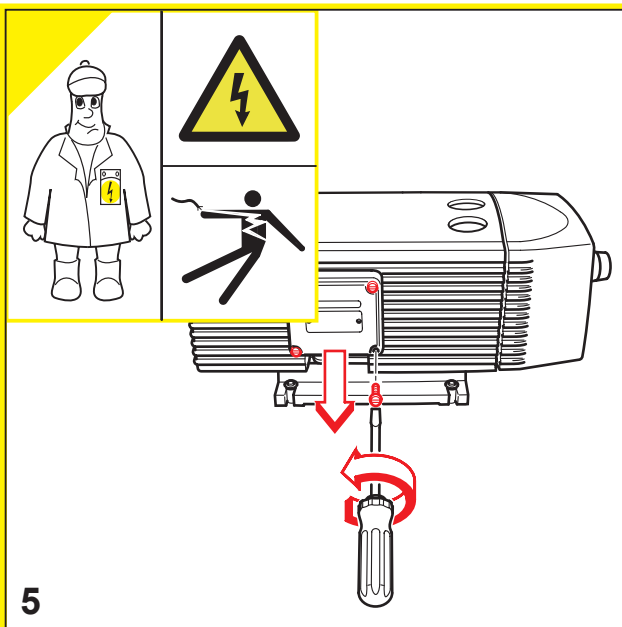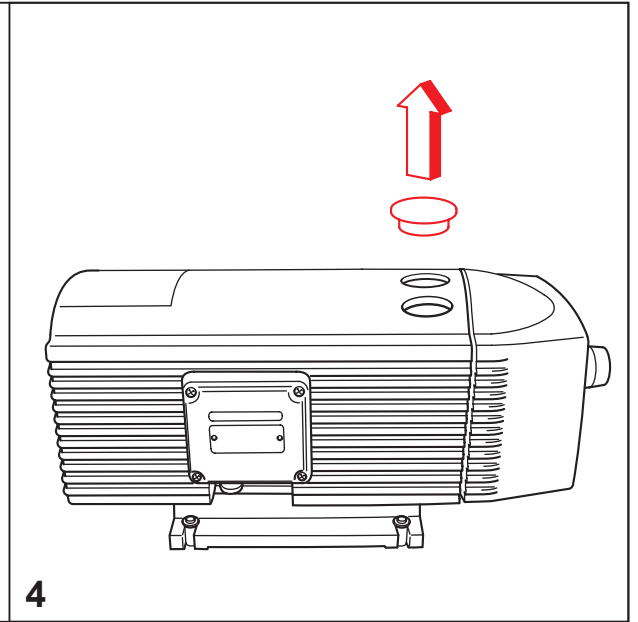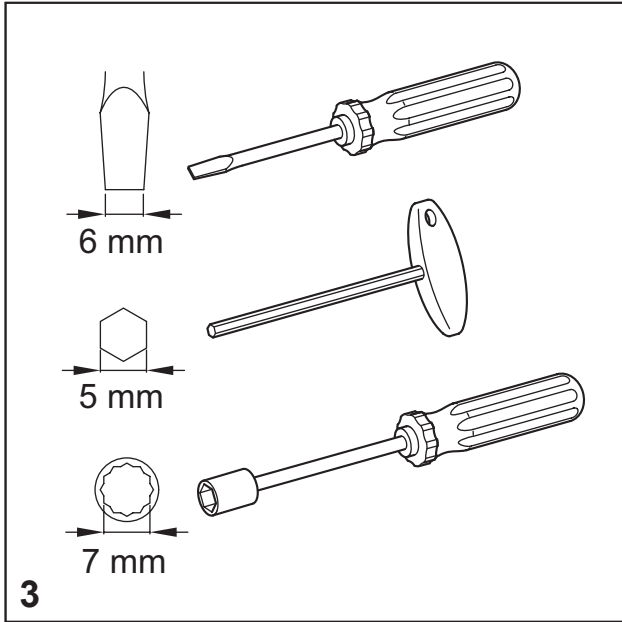

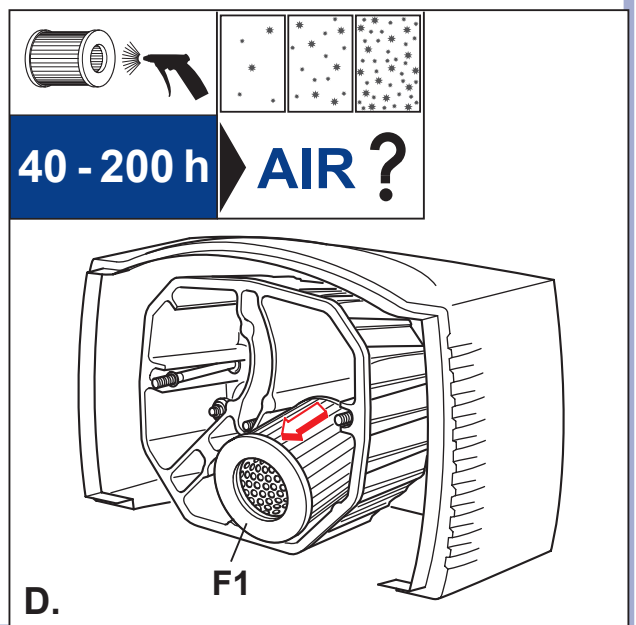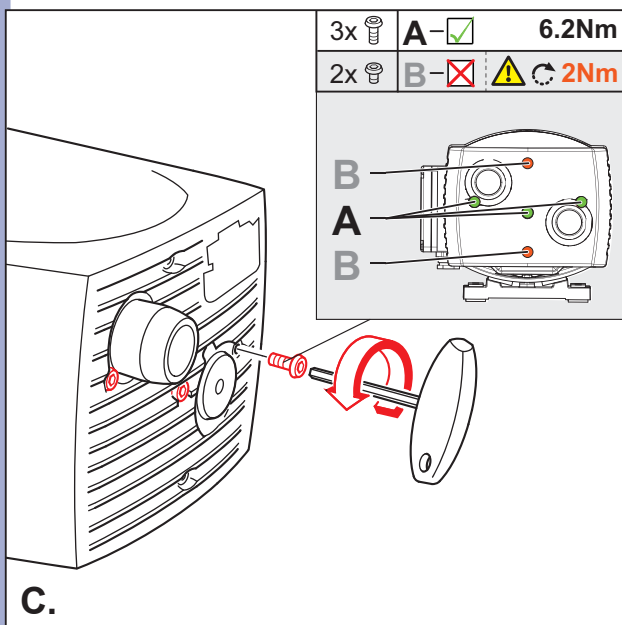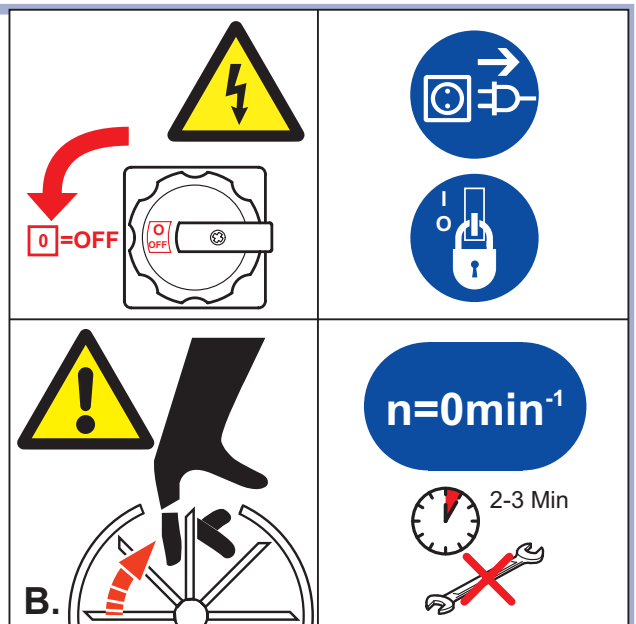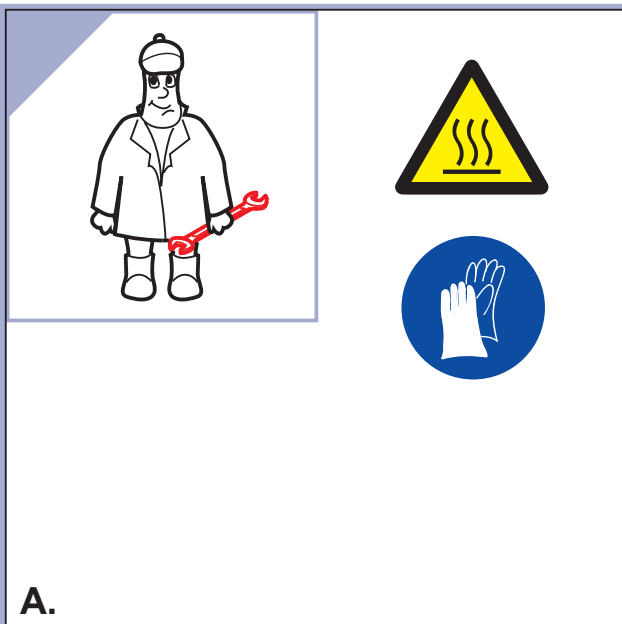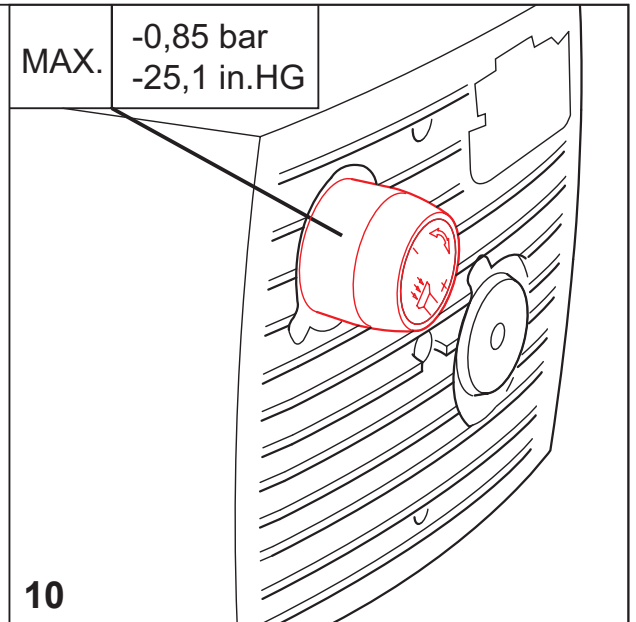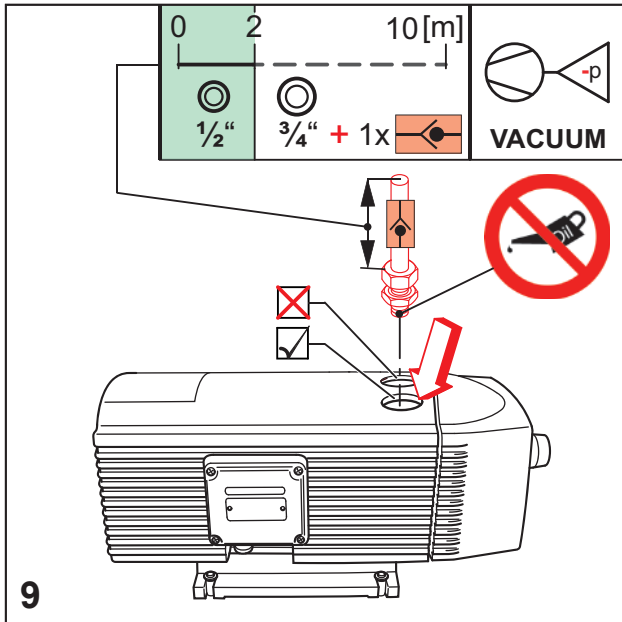

**F1:** D: 38 mm  
H: 38 mm  
No.: 9095180000

**EN149 - FFP3**  
42 CFR 84 - N100

**E.**

**F.**

**3000 h**

$A_{MAX} = 27\text{mm}$   
 $A_{MIN} = 18\text{mm}$   
 $A < 18\text{mm}$

→ No. 90132700007 (SET)

**G.**

**H.**

**www.becker-international.com**

Gebr. Becker GmbH  
Hölker Feld 29-31  
D-42279 Wuppertal  
info@becker-international.com

---

**SERVICE**  
[www.becker-international.com](http://www.becker-international.com)  
Sales and service network